保証書

モイスチャーチェッカーは、お買い上げ日から一年間、無償修理いたします。以下の「保証規定」を必ずお読みください。

●品名・型式名

MY-808 S

●製造番号

●お買い上げ年月日

年　　月　　日

保証規定

●保証書は大切に保管してください。
保証書は必ず「購入日・保証期間」などをご確認のうえ、大切に保管してください。
●本製品の保証期間はご購入日から1年間です。
保証期間中、取扱説明書にしたがった正常な使用状態で万一故障が生じた場合は、保証書を提示のうえ、代理店・営業所に修理を依頼してください。
●保証期間後の修理は有償となります。
修理によって本製品の維持が可能と判断される場合は、お客様のご希望により有償で修理いたします。
●これらの保証は日本国内においてのみ有効です。
●メーカーあるいは代理店の印なき保証書は無効です。

ご使用上の注意

●分解、改造、加工の禁止。
機器が故障したり、金属物が入ると、やけどや火災の原因になります。

●煙、異臭、異音が発生したとき、あるいは機器を落下、破損したときは使用を中止する。
本体から煙、異臭、異音が発生したとき、あるいは機器を落下、破損したときは使用を中止してください。そのまま使用すると、火災につながるおそれがあります。販売店または弊社代理店までご相談ください。

●異常や故障の場合は
万一、異常や故障の場合には、電池を抜いて販売店へご連絡ください。そのままご使用になりますと、故障の範囲を大きくしたり、思わぬ事故の原因となります。

●不安定な場所に置かないでください。
落下などにより、ケガや破損の原因となります。

●上にものをのせないでください。
本体の上にものをのせないでください。落下、転倒などにより、ケガや破損の原因となります。

●次のような場所での保管はしないでください。故障の原因になります。
・高温、多湿のところ・ほこりの多いところ・直射日光の当たる場所・高温になる場所

●インバーター等の照明器具からは距離を離して使用してください。
インバーター等からのノイズが測定に影響を及ぼし正しく測定できない場合があります。

●センサー面はキズをつけないでください。
正しく測定できない場合があります。

●長期間使用しない時及び移動時は必ず電池を抜いてください。
本体を長期間使用しない場合や、カバンの中等にいれて持ち運ぶ場合は、必ず電池を抜いてください。

●本体を使用する際の温度は必ず定格範囲内で。
定格より高温あるいは低温な環境で使用しないでください。(使用温度範囲：+10°～+40°)

●定格より高湿度な環境で使用しないでください。
(使用湿度範囲：70%以下　非結露)

●外傷、皮膚疾患部等に触れないでください。
外傷、皮膚疾患等に触れるような使用は避けてください。

●清潔に保ってください。
測定時の都度、先端のセンサー部分を乾いた柔らかい布で拭くなどして、清潔に保ってください。

お買い上げ店名

印

SCALAR NEXT

株式会社スカラネクスト
本社　〒106-0032 東京都港区六本木2-2-7 304
TEL 03-3528-9881(代)　FAX 03-3528-9882

モイスチャーチェッカー

MY-808S

正しく上手にお使いいただくために

取扱説明書

SCALAR NEXT

このたびは
モイスチャーチェッカー［MY-808S］を
お買い上げいただきありがとうございます。

モイスチャーチェッカーは、手軽にお肌のうるおい状態
をチェックできる高精度な肌専用の水分計です。
この説明書では、その機能と使い方を正しく
ご理解いただくために大切なことを
まとめています。
お使いになる前によくお読みになり、
美しい素肌づくりにお役立てください。

モイスチャーチェッカー［MY-808S］の特徴

持ち運びに便利な超小型・軽量
わずか70 gの軽量・コンパクトボディ。まるで体温計を使うような感覚で、いつでもどこでも肌チェックできます。

ひとめでわかる測定値表示
測定値は、わかりやすい%表示。測定部位の水分率がひとめでわかります。

正確な測定値が得られる完全自動補正式
繰り返し使用するたび、常に正確な測定値を得るために誤差を補正するゼロ調整プログラムを採用しています。

わずかの電池で長く使える省電力タイプ
単4アルカリ電池2本で、連続2週間以上使用できます。

正しい使い方をマスターしましょう。

測定前の準備（単4電池を2本使用します）

1 単4乾電池を2本用意します。

2 電池フタを開け、乾電池を入れます。

3 電池ボックスのカバーを取り付けます。

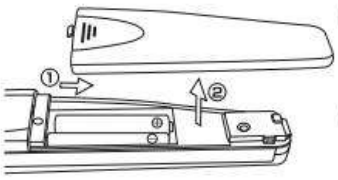

① フタを水平方向に後ろに押し出します。
② フタを持ち上げ取り外します。

●電池交換について
電源を入れた時に「Ｌｏ」と点滅表示したら、電池交換時期です。
同じ種類の単4 乾電池を2本セットでお取替えください。

測定時の注意

●測定するときは､必ずセンサー面を測定部位に垂直にあててください。
●汗をかいている場所（濡れた場所）を測定しないでください。
●正しく測定するために、使用手順をお守りください。
●温度の低いところから高いところへ持ち込んだ場合、しばらく使用できないことがあります。
●本書内の「故障かな」と思ったらと、ご使用上の注意の項も併わせてご参照頂きますようお願い致します。

ご使用方法

1
キャップをはずす。
まずセンサー部前にあるキャップを外します。

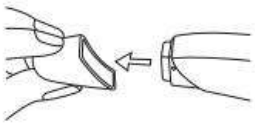

2
Power スイッチを押下する。

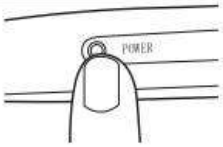

3
「ピピ」と音がするまで待つ。
表示部点滅後、「ピピ」と音がして0.0 表示になれば、測定準備完了です。

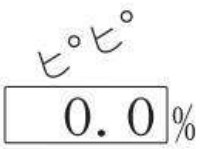

4
測定します。
センサー面を水平に肌に押しあて「ピー」という音が鳴るまで数秒待ちます。

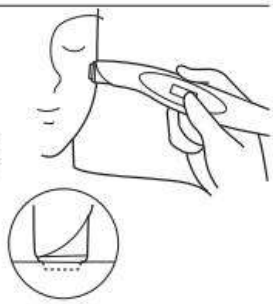

5
数値を読む。
「ピー」と鳴ったら、センサー部を肌から離し表示部の数値を読み取ります。
表示された数値が測定部位の水分率です。

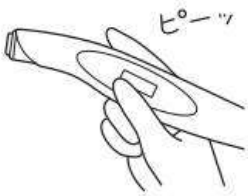

6
センサー部をふく。
測定誤差を更に無くすために、センサー面をティッシュペーパーや柔らかい布等で、かるく拭いてください。

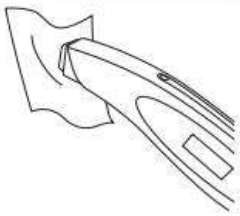

7
続けてご使用の際は。
続けてご使用になる場合は使用方法の2番から繰り返し操作ください。

8
測定終了方法。
測定値が約30秒間表示された後に、自動的に表示が消え電源がOFFになりますので、センサー面をふきキャップを取り付けてください。

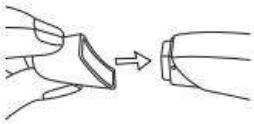

正しい使い方を
マスターしましょう。

「故障かな」と思ったら

●電源スイッチを入れても表示部が点灯しない。
→電池が切れていませんか。
→電池が正しくセットされていますか。

●水分量が正しいと思われない測定値になる。
→センサー面が正しく肌に触れていますか。
→測定部位が濡れたり、汚れたりしていませんか。
測定部位が汗などで濡れている部分と、乾いている部分とが近距離である場合、センサー面の位置が少しずれるだけで大きく測定値が変わりますので、測定部位は必ず乾いた状態で測定を行います。

●表示部に数値では無く、『E01』と表示される。
→起動時、センサー面に触れてしまっていませんか。
→測定時、センサー面が正しく肌に触れていますか。
→近くにインバーター照明器具がありませんか。

●表示部に数値では無く、『E02』と表示される。
→センサー面が汚れていませんか。
→センサー面がぬれていませんか。

●起動時表示部に数値では無く、『Lo』と点滅表示される。
→電池の交換時期をお知らせしています。
使用は通常通りできますがお早めに交換してください。

製品仕様

●本体正面

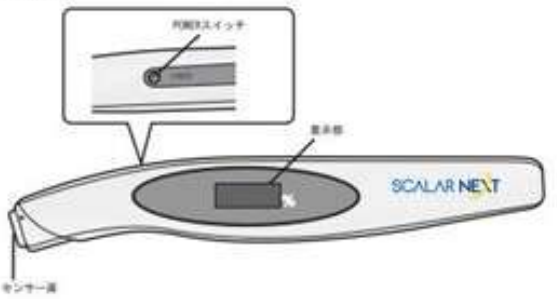

●本体裏面

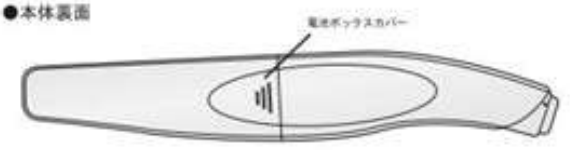

●使用電源／単4型乾電池×2本 **●動作時間**／連続336時間以上（約2週間位・単4型アルカリ乾電池使用の場合） **●動作温度範囲**／5～40℃
●総重量／70g（電池含む） **●外形寸法**／195×31.5×20mm

上手に使うための、
あんなこと、こんなこと。

モイスチャーチェッカーによる肌タイプ別水分率

モイスチャーチェッカーによる肌水分測定にもとづいた、お肌のタイプ別水分率（%）です。ご自分の測定値と比較して、肌状態のチェックにお役立てください。一般的に皮膚の薄い目尻や油分の出やすい額は、腕等に比べ表示値が高くなっています。またメークや外気の温度・湿度等によるお肌への影響によって、表示値は多少異なる場合があります。

●前腕内側

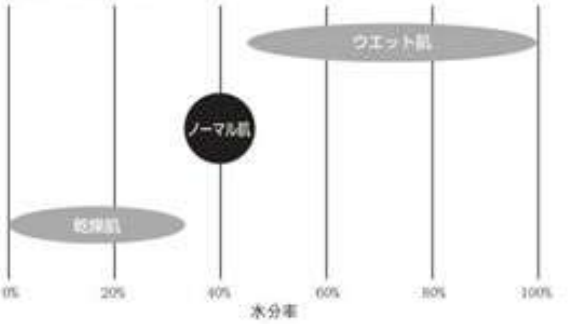

●目尻

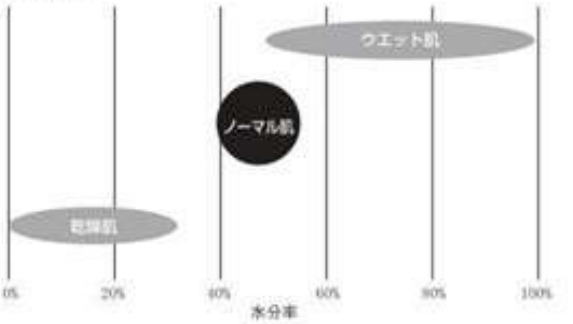

●額やや下

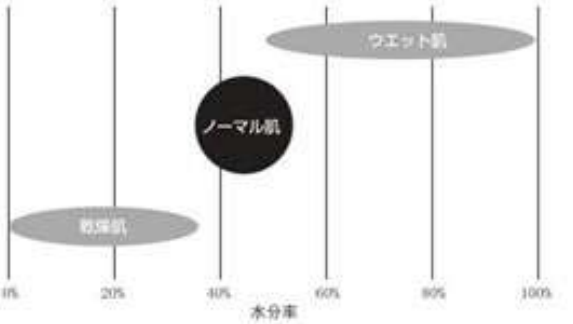

上手に使うための、あんなこと、こんなこと。

モイスチャーチェッカーについて、もっと知りたい

Question&Answer

Q

皮膚のどの部分まで測定できますか。

皮膚のもっとも外側の角質層は、肌の水分量を守る役目があります。モイスチャーチェッカーの測定対象は、センサー部をあてた部位の角質層です。

A

Q

正しく測定できているかどうか不安です。

不安を感じる方は、同じ部位を2～3回続けて測定することをおすすめします。測定値にバラツキがなければ、正しく測定できています。

A

Q

肌に押しあてる力によってデータが変化しますか。

軽く押しあてただけではセンサー全面がしっかりあたっていないため、実際より低い値になってしまいます。正しく計測するために、必ずセンサーが本体いっぱいに入り込むまで押してください。

A

Q

センサー部のお手入れ方法は。

センサー部が汚れたら、乾いた柔らかい布およびティッシュペーパーで拭き取ってください。その際は、センサー表面のみを拭くようにしてください。

A

OPERATION GUIDE
Moisture Checker for Skin

Thank you for purchasing the Moisture Checker for Skin.
This guide contains instructions on how to use the product. Please read the guide completely in order to get the most benefit from the product, then store the guide for future reference.

IMPORTANT SAFETY INSTRUCTIONS:

"READ ALL INSTRUCTIONS BEFORE USING"

1. The unit may not be disassembled,modified or converted.
2. Cease use of the unit if water or other liquid has found its way into it.
3. Never touch the unit with wet hands.
4. Do not subject the unit to any strong impact.
5. Do not place the unit anywhere unstable.
6. Do not place anything on the unit.
7. Do not place the unit where it will be exposed to humidity or dust.

SAVE THESE INSTRUCTIONS

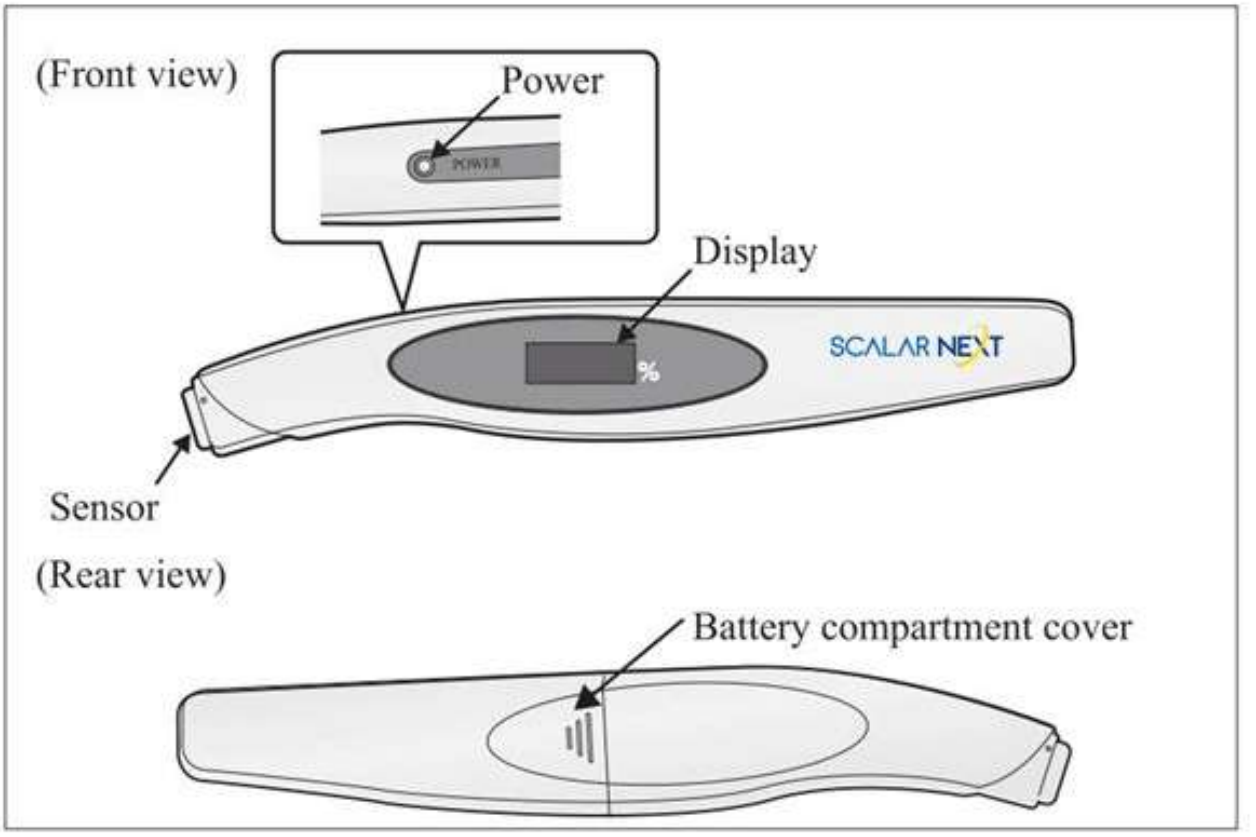

BASIC OPERATING INSTRUCTIONS:

1. Switch on the Power.
2. Wait until the display shows a constant "0.0" and a beep is heard. The Checker is now ready to take a reading.
3. Press the Checker onto the skin perpendicular to the area of skin you are checking so that the Sensor is depressed into the Checker. (It is connected to the Checker via a spring mechanism.)
4. Hold the Checker steady for a few seconds until you again hear a beep sound. The Checker display will indicate the amount of moisture on the surface being checked.
5. Gently wipe the surface of the Sensor with a soft cloth or tissue.
6. To perform another check, repeat steps 2 - 6 above.
7. Measurement Completion Procedure. After the measured value has been displayed for 30 seconds, the value will automatically disappear and the power will shut down. After the power shuts down, wipe the Sensor and replace the cap.

FURTHER OPERATION DETAILS:

1. Wipe the surface of the Sensor with a soft cloth or tissue before each measurement.
2. Sterilize the surface of the Sensor with an anti-bacterial anti-viral solution before using the Checker on another person. Always wipe the surface afterwards to remove any oil or film residue from the sterilization process.
3. Always press the Checker perpendicular to the area you are checking. The whole surface of the Sensor should be in contact with the area you are checking.
4. Do not attempt to check areas that have excessive sweat, dirt, wetness, or hair.
5. Always follow the instructions as written in this Operation Guide.
6. Please refer to both "DEFECT SYMPTOMS / POSSIBLE CAUSES" and this section in this Operation Guide.

REPLACING THE BATTERIES:

1. Slide the lid away from you in the horizontal direction and then lift the lid to remove it.
2. Remove the old batteries, if present.
3. Place two new AAA batteries in the compartment, taking care to orient the batteries according to the indication in the compartment.
4. Replace the battery compartment cover.

Battery Replacement:

If the message "Lo" flashes when the Checker is powered up, then the batteries must be replaced. Replace the used batteries with 2 batteries of the same AAA type.

DEFECT SYMPTOMS / POSSIBLE CAUSES:

Before deciding the unit needs repair, please consider the following cases:

Case 1: No display when power is turned on.

a) Check if the batteries are properly oriented.
b) If so, try replacing the batteries.

Case 2: The unit shows "0.0" but does not show any reading when placed on the skin.

a) Make sure the unit is being pressed perpendicular to the area being checked.

b) Make sure the area you are checking is not too sweaty, dirty, wet, or has hair. When there is only a short distance between a wet area (wet from sweat, etc.) and a dry area where the moisture level is to be measured, the measured value may fluctuate greatly. A large fluctuation may occur even if the position of the Sensor is changed slightly on the surface. Therefore, measurements must always be performed only on dry areas.

Case 3: On the display, "E01" appears instead of a measurement value.

a) Ensure that you did not accidentally touch the Sensor surface when activating the Checker.
b) Ensure that the Sensor surface is placed correctly on the skin when taking a measurement.
c) Ensure that no inverted light is nearby.

Case 4: On the display, "E02" appears instead of a measurement value.

a) Ensure that the Sensor surface is clean.
b) Ensure that the Sensor surface is dry.

Case 5: When activated, "Lo" begins flashing on the display, instead of a measurement value.

a) "Lo" indicates that the batteries need replacement. Although the Checker can still be used, the batteries should be replaced as soon as possible.

WARRANTY

Scalar Corporation warrants this product against defects in materials and workmanship under normal use for a period of ninety days from the date of shipment. During the warranty period Scalar will repair or replace, at no extra charge, all replacement parts installed pursuant to the warranty, provided that such replacement parts are needed because of normal use of the product for the purpose intended. All defective parts replaced shall become the property of Scalar Corporation.

This warranty does not apply if the product has been damaged by accident or misuse or as the result of service or modification by other than Scalar Corporation or one of its authorized service representatives.

No other express warranty is given. The repair or replacement of a product is your exclusive remedy. ANY OTHER IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS IS LIMITED TO THE NINETY-DAY DURATION OF THIS WRITTEN WARRANTY. IN NO EVENT SHALL SCALAR NEXT CORPORATION OR ANY OF ITS AUTHORIZED SALES OR SERVICE REPRESENTATIVES BE LIABLE FOR CONSEQUENTIAL DAMAGES.

SCALAR NEXT CORPORATION
304 CLAIRE ROPPONGI 2-2-7
ROPPONGI,
MINATO-KU
TOKYO JAPAN